

NOTE: AFTER CONCRETE IS REPLACED, SEAL CROSS SAW CUTS WITH INJECTABLE MATERIAL BY OTHERS

TERMINATION
REFERENCE - US5
DETAIL

REPLACEMENT CONCRETE


DIG OUT AND EXPOSE
UNDERSLAB
MEMBRANE A
MINIMUM OF 2" PAST
SAW CUTS - APPLY A
PIECE OF 650 OR PRM
MEMBRANE TO
CLEANED FILM SIDE
OF UNDERSLAB

EXISTING UNDERSLAB
MEMBRANE

US OUTSIDE CORNER BOOT
REFERENCE AS APPLIES -
US17 DETAIL

US INSIDE CORNER BOOT
REFERENCE AS APPLIES -
US11 DETAIL

APPROVED
SUBSTRATES

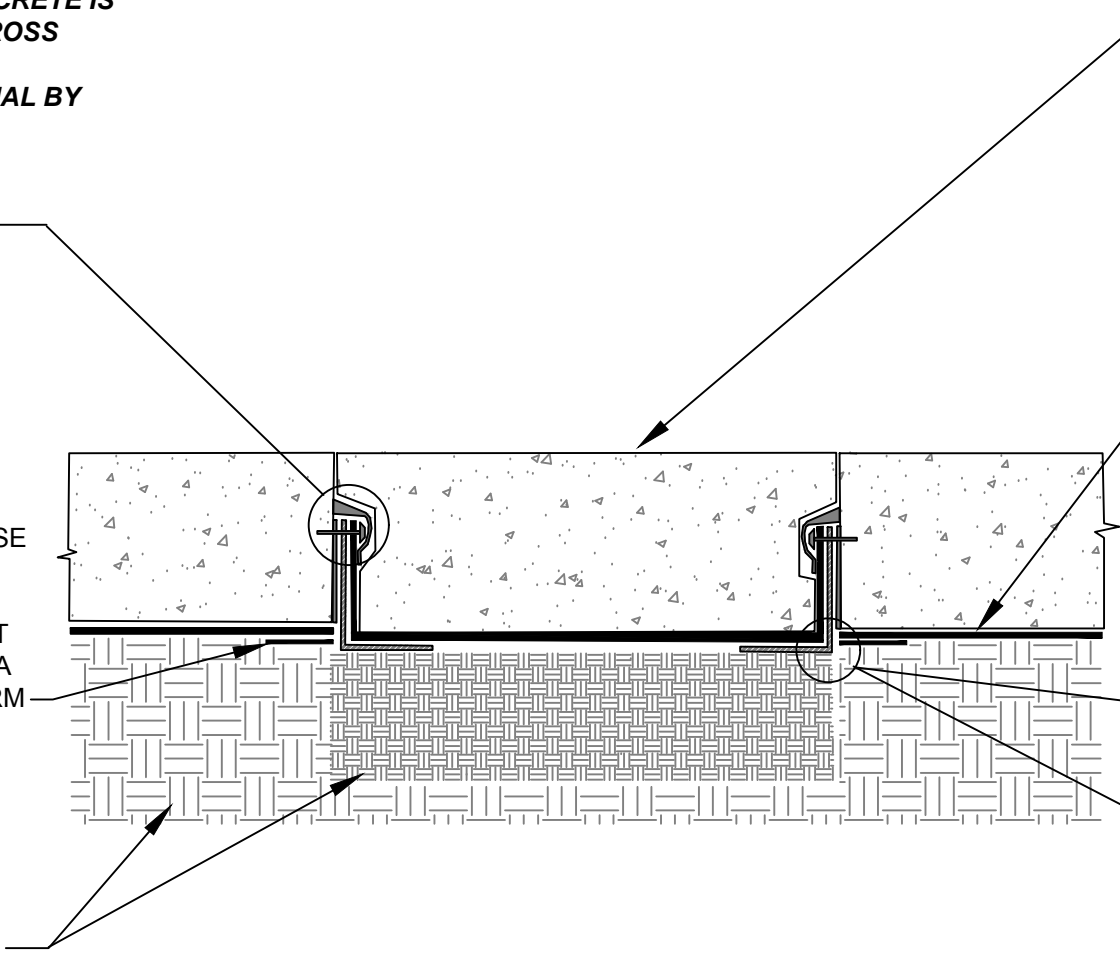

US6

SECTION @ SAW CUT SLAB THROUGH UNDERSLAB MEMBRANE

<p>The information provided is based on data and knowledge considered to be true and accurate and is offered for the users' consideration, investigation and verification, but we do not warrant the results to be obtained. Please read all data sheets, statements, recommendations or suggestions in conjunction with our conditions of sale, which apply to all goods supplied by us.</p>	NOT TO SCALE
	EFFECTIVE DATE: 06/14/2018
	SUPERCEDES: 03/18/2014